



### Cardboard Package 1/2


**A** Metal Armrest 1 pcs.

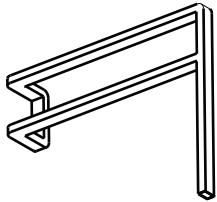


**B** 3 seater bottom frame 1 pcs.

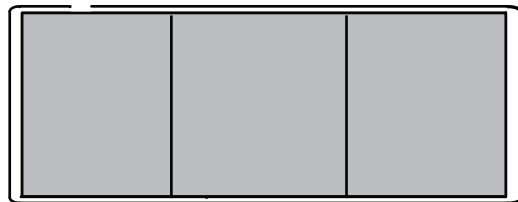

**C** 3 Seater Metal back Frame 1 pcs.

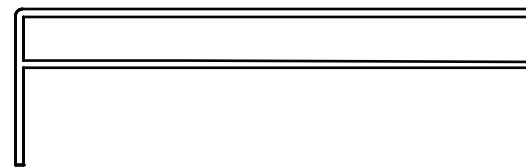

**D** Seat cushion 3 pcs.

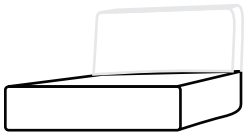

**E** Back cushion 3 pcs.



**F** m8x40 imbus screw 3 pcs.




**G** m6x15 imbus screw 4 pcs.




**H** Foot glides 3 pcs.



**I** Metal Corner back 1 pcs.

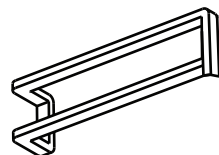

**J** Metal support leg 2 pcs.




**K** m8x15 imbus screw 4 pcs.

*\*do only fix the 2 metal support legs*



### Cardboard Package 2 /2


**A** Metal Armrest 1 pcs.

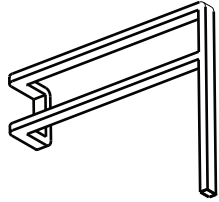


**B** 2 seater bottom frame 1 pcs.




**C** 2 seater Metal back frame 1 pcs.

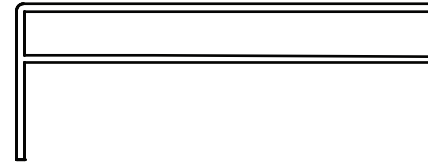

**D** Seat cushion 2 pcs.

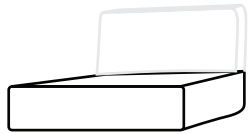

**E** Back cushion 2 pcs.

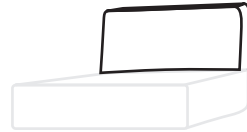

**F** m8x40 imbus screw 3 pcs.




**G** m6x15 imbus screw 4 pcs.




**H** Foot glider 3 pcs.




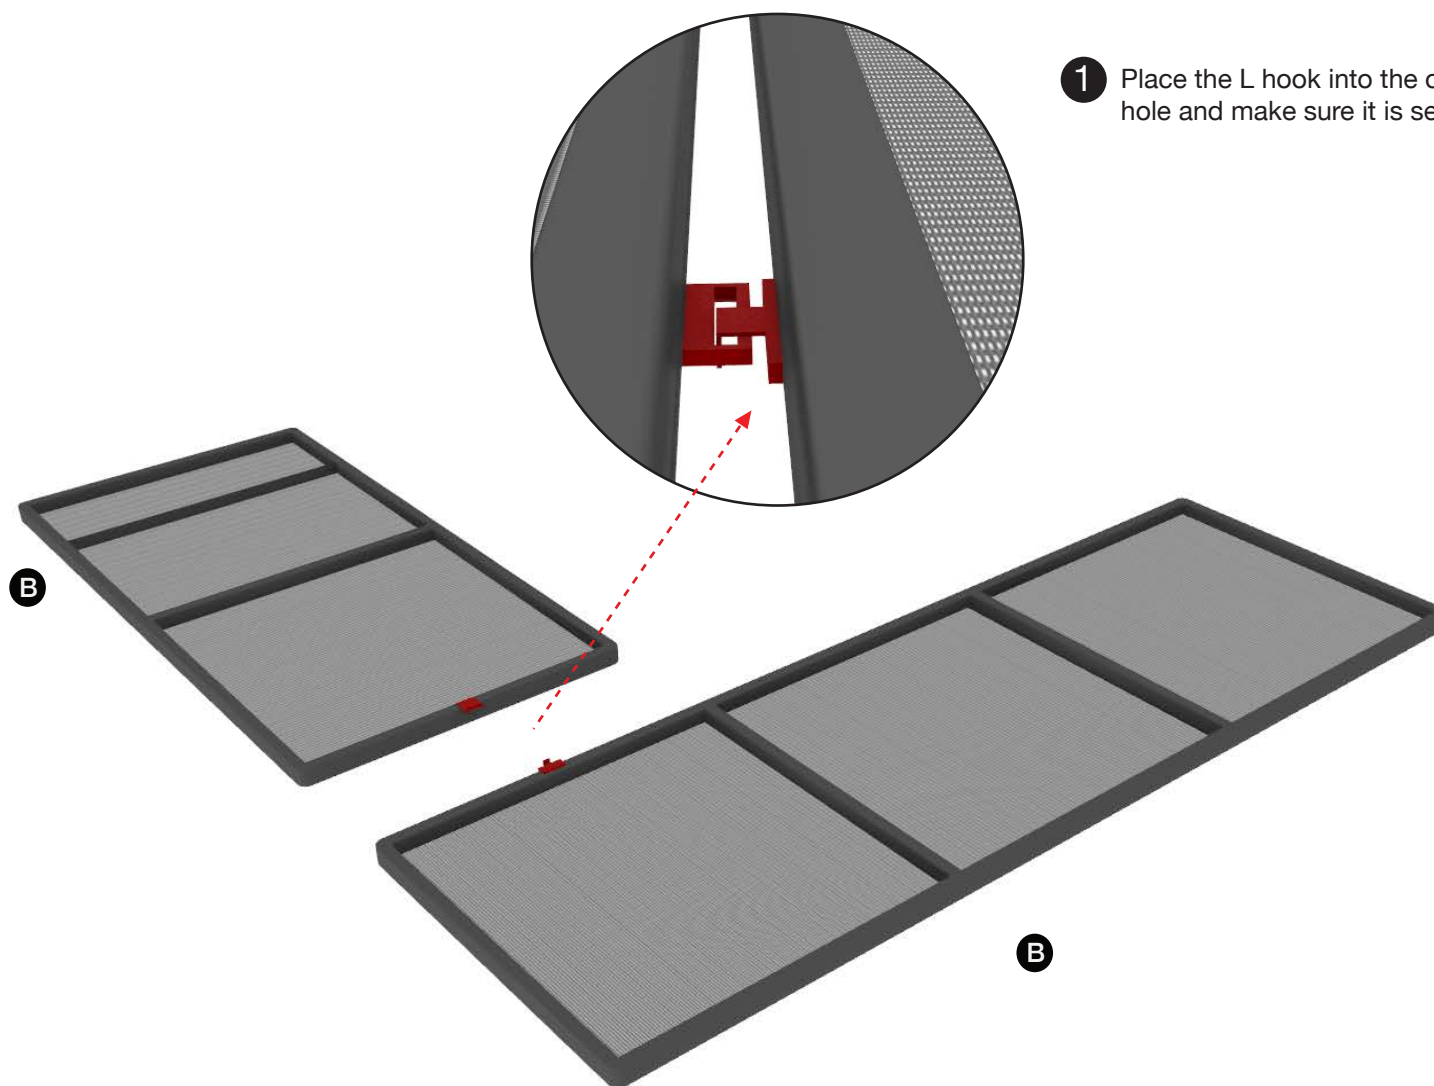


- 1 Place the L hook into the opposite side hole and make sure it is securely fastened.

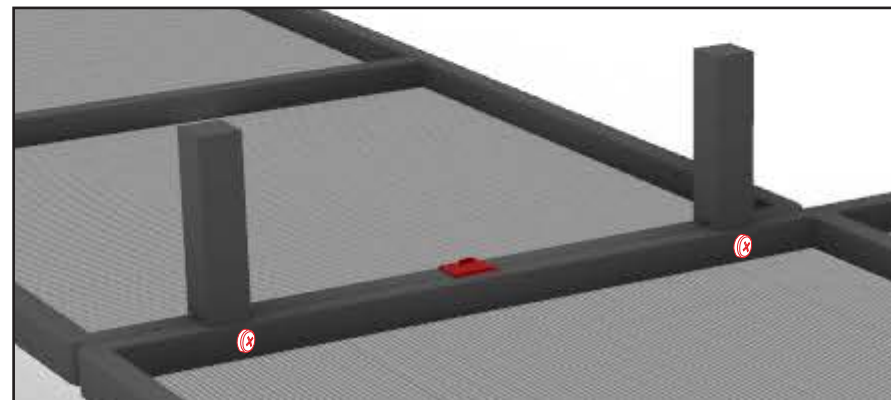

- 2 Insert the metal support legs (J) into the base, and fix using the m8x15 screws (G) with the helping of Allen key. Ensure each screw is tightened properly.v

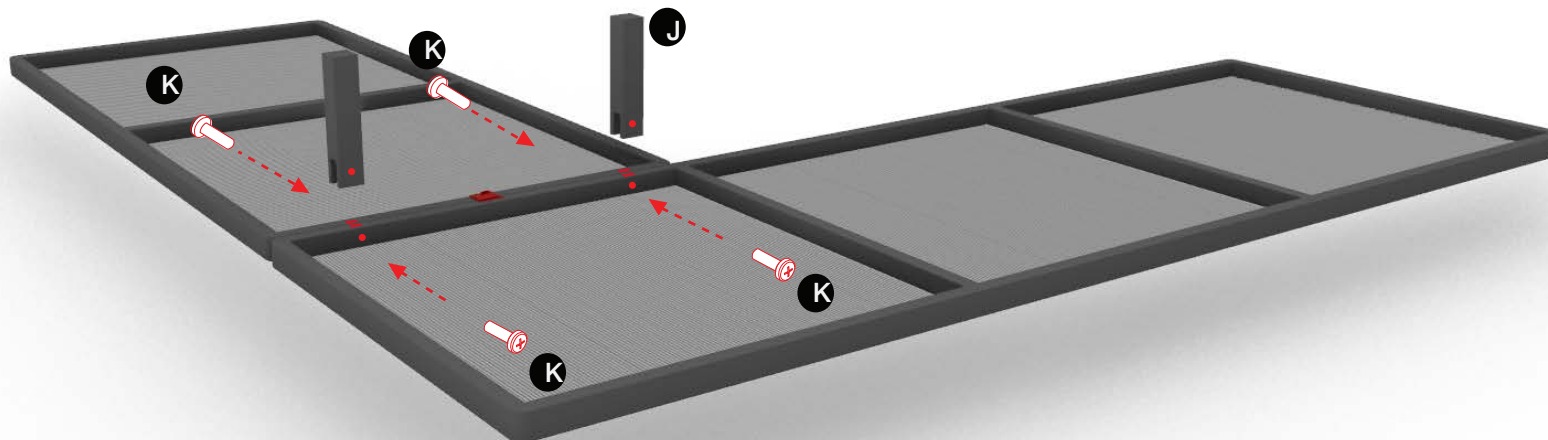

- 3** Fix the metal backrests to the base using the m8x40 (F) screws. Ensure that each screw is properly tightened to guarantee the stability and durability of the assembled structure.

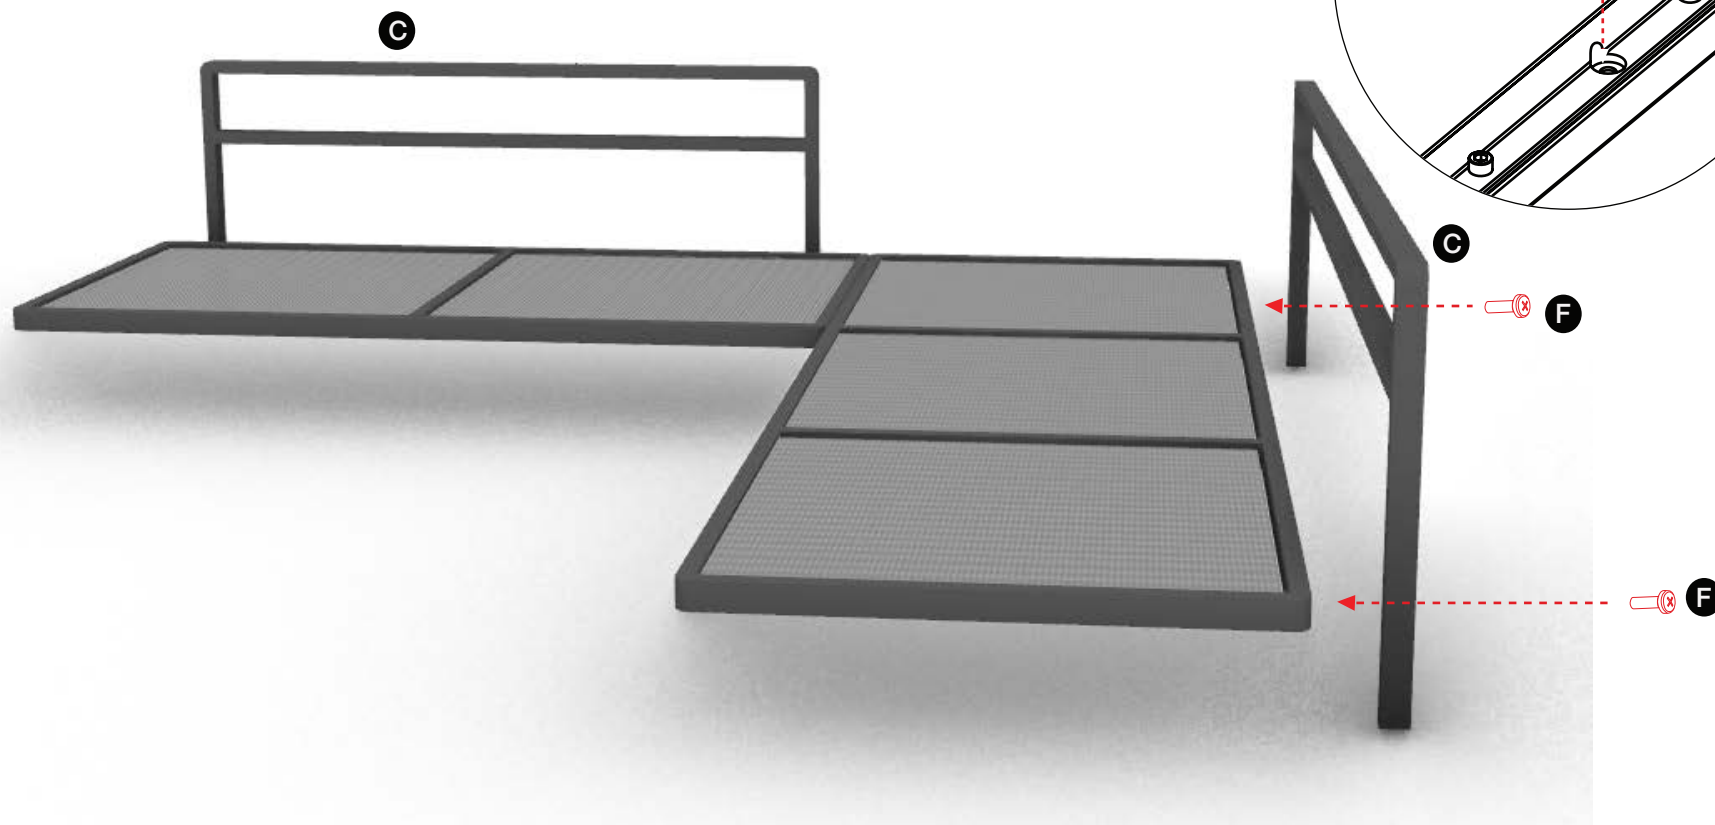

- 4 Complete the assembly by attaching the metal corner backrest (i) to the sofa using the m6x15(G) screws. Ensure that all screws are firmly tightened.

