


## OPAL WOX & X-TREME S WOX ASSEMBLY INSTRUCTION

### Material Identification

**A** m6x16 screw  
32 pcs.




**D** metal frame with shell  
4 pcs.

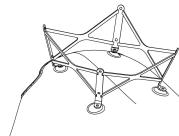


**C** wooden leg  
16 pcs.

\*Leg's shape could be change  
for the different wood types

**1** Fix the wooden leg on metal strap by m6x16 screw. Firstly fix indicated red line hole.  
( Should not be complete tighten the screw).

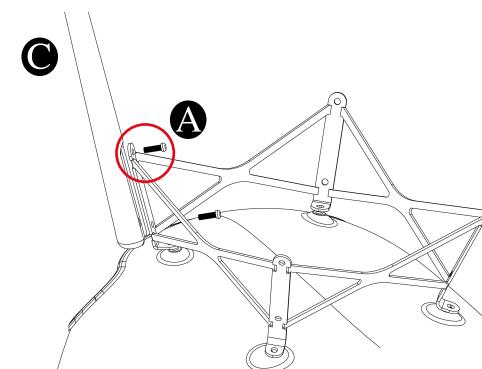

**2** Than fix the other one on metal strap

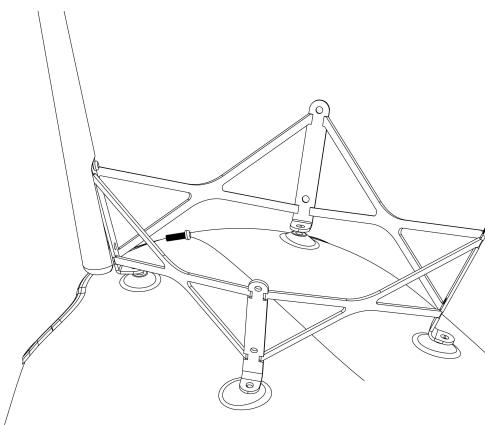

**3** And finally tighten completely both of screws.  
all sections repeat for other legs.

